

# OPERATING INSTRUCTIONS



OFF ROAD SEATING MANUFACTURER



## LGV90/C1

### 1. Adjustable back extension

At rear hold lip to raise. Push down to lower.

### 2. Adjustable armrests

Rotate handwheel to right to higher armrest angle. Rotate to left to lower armrest angle.

### 3. 3-steps lumbar support

3 positions. Rotate forwards for positions 1, 2 and 3. Rotate again to return to first position.

### 4. Adjustable backrest

Push lever backwards and lean back or forwards for desired angle.

### 5. 2-point ALR seat belt (automatic locking)

Pull belt out. Pull across body. Insert clasp in slot.

### 6. Slide rail adjustment

Lift lever to operate whilst pulling body forward on seat or push backwards to move seat horizontal.

### 7. Turntable (optional)

Lift lever and turn to left or right. Release to lock.

### 8. Semi-automatic weight adjustment (compressor)

Push in valve to inflate. Pull out to deflate.

### 9. Horizontal suspension (lock- & unlockable)

Flip forward to operate. Flip rearward to lock.

### 10. Stepless height adjustment (limiter)

When seated and air is inflated in suspension: rotate knob to extend or limit suspension travel (50 - 135 mm). Turn left for higher height. Turn left for lower height.





# YOUR OFF ROAD **SEATING** MANUFACTURER



At UnitedSeats we are dedicated to providing a quality service from the initial quotation to final product delivery. Our commitment to service, knowledge and product availability has made us the preferred source for your seating needs.

[WWW.UNITEDSEATS.COM](http://WWW.UNITEDSEATS.COM)

